



 
This following slides will explain about NFC cards and how to write cards.



**NEW: if you own an Android device with an NFC reader, you'll be able to write NFC ID-cards with your Android device as well, this will even work from certain smartphones! Please download and install the latest app release from our website.**


Plug the card reader into an empty USB port of your computer.

- **NOTE:** Check your computers device manager if the card reader is recognized and correctly installed, if not; please run a Windows update and afterwards check again of the card reader is recognized and installed correctly before continuing.
- The card reader can only be used at 1 control client per computer.
- Make sure the card reader is installed before opening the MVI Control Client.



## Select the right card reader.


- **1:** Open the **MVI Control Client** then press **F12** to open the settings menu of the MVI Control Client.
- **2:** Select **NFC ACR122**, the client will now automatically close, now start the client again, the card reader is now selected.
- **NOTE:** press **F12** again to check if **NFC ACR122** is selected, then close the settings menu.

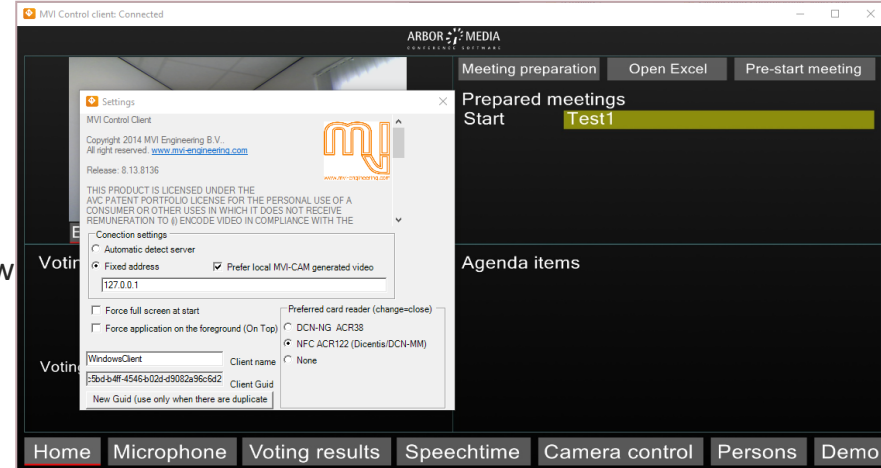


Select a person you want to write a card for.

- **1:** Start a meeting.
- **2:** Select a person from the list.
- **3:** Place an ID card on the card reader.
- **4:** Click **Write card** to write the ID card for the selected person.
- **NOTE:** repeat these steps for all persons. Cards can now be used, but please test the first ID card you wrote before continuing with the rest of the cards.

**1:**

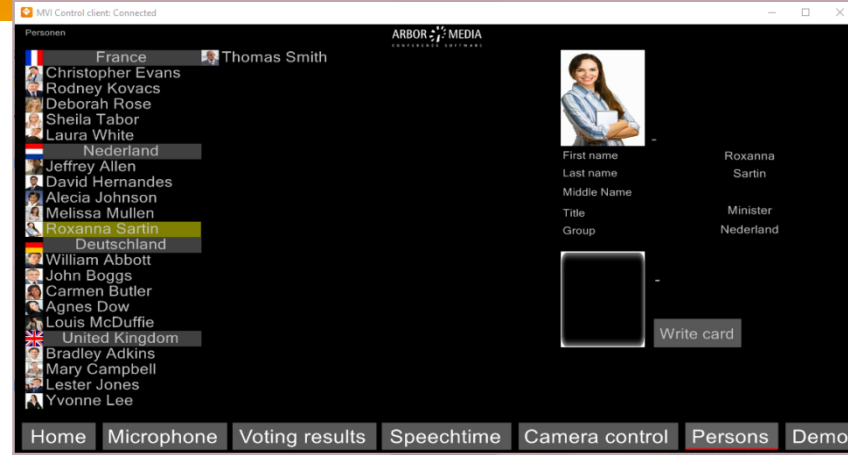

**4:**

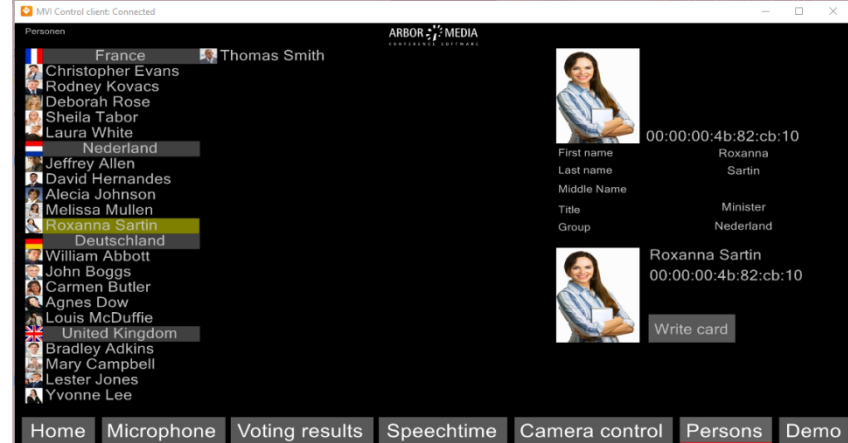




This following slides will explain about chip cards and how to write those cards.



Plug the card reader into an empty USB port of your computer.

 
- **NOTE:** Check your computers device manager if the card reader is recognized and correctly installed, if not; please run a Windows update and afterwards check again of the card reader is recognized and installed correctly before continuing.
- The card reader can only be used at one Control client per computer.
- Make sure the card reader is installed before opening the MVI Control Client.





Select the right card reader.

- **1:** Open the **MVI Control Client** then press **F12** to open the settings menu of the MVI Control Client.
- **2:** Select **DCN-NG ACR38**, the client will now automatically close, now start the client again, the card reader is now selected.
- **NOTE:** press **F12** again to check if **DCN-NG ACR38** is selected, then close the settings menu.

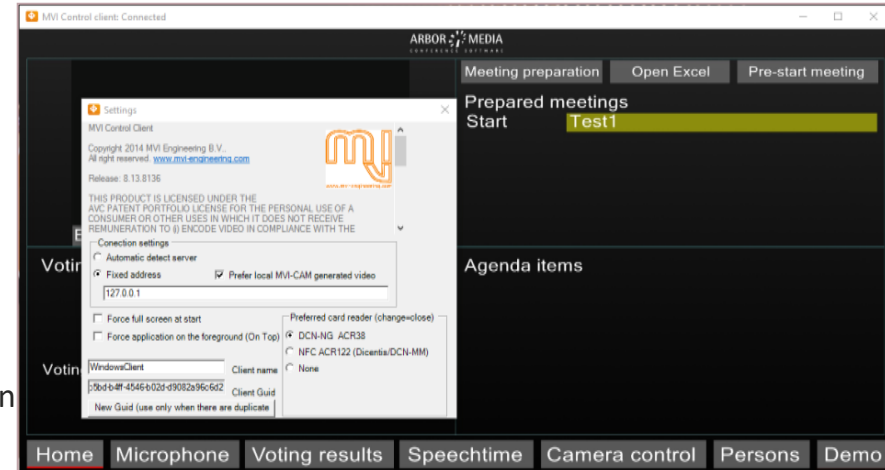




Select a person you want to write a card for.

- **1:** Start a meeting (the one where you've added card numbers).
- **2:** Select a person from the list.
- **3:** Plug an ID card into the card reader.
- **4:** Click **Write card** to write the ID card for the selected person.
- **NOTE:** repeat these steps for all persons. Cards can now be used, but please test the first ID card you wrote before continuing with the rest of the cards.

**1:**

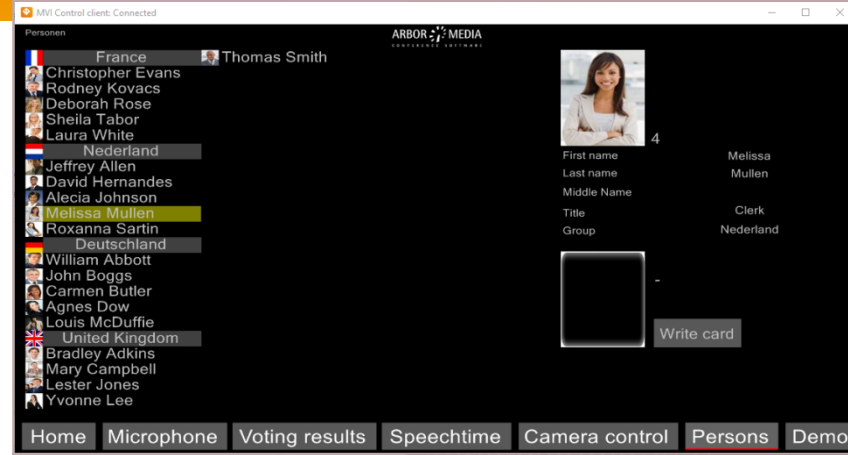

**4:**

