




AudioVisual
conference automation

Skaarhoj PTZ Pro configuration



Step 1

- Download firmware updater on Skaarhoj.com.

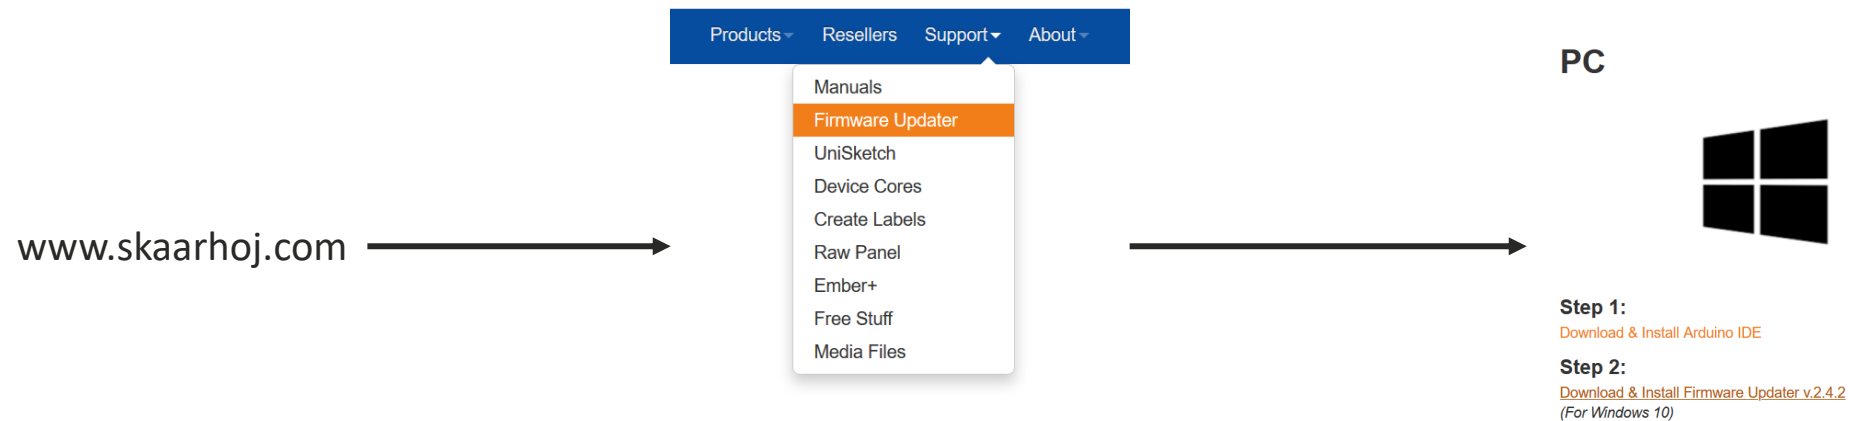

Step 2




- Connect the Skaarhoj PTZ Pro with USB to your computer.
- Open Firmware Updater.



Firmware Updater
App



Step 3

- Open **Online Configuration**.
(will open in your default browser)
- Select **Raw Panel**.
- **Save** & close the online configuration.
- If raw panel was not active already. Choose **Check for Updates** at the **Firmware Updater**. This will overwrite the firmware on the controller.

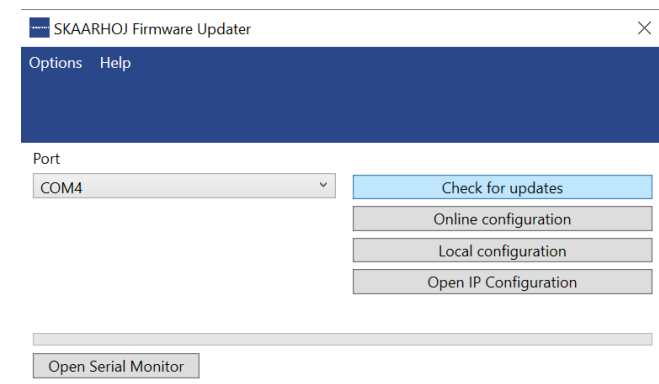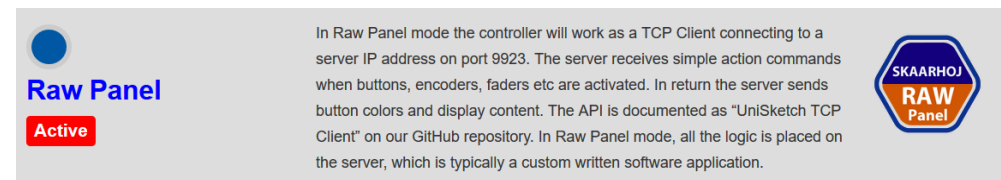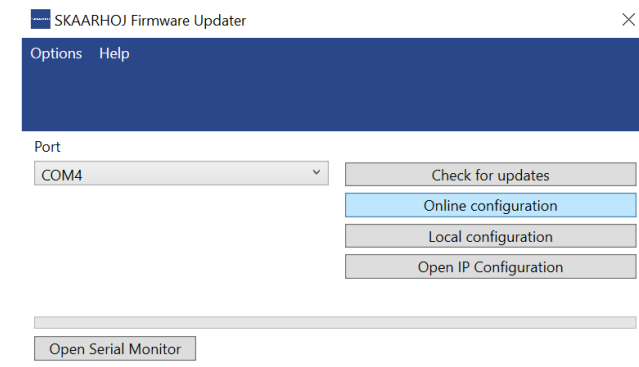

Step 4

- At the **Firmware Updater**, select **Open IP Configuration**.
- Enter the IP address of the **MVI Server machine** at the **UniSketch Raw Panel** field and click **Save IP**, so the **Skaarhoj PTZ Pro** can find the server.

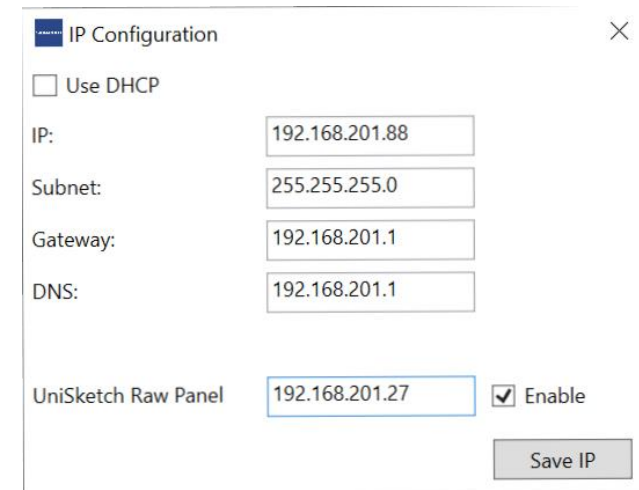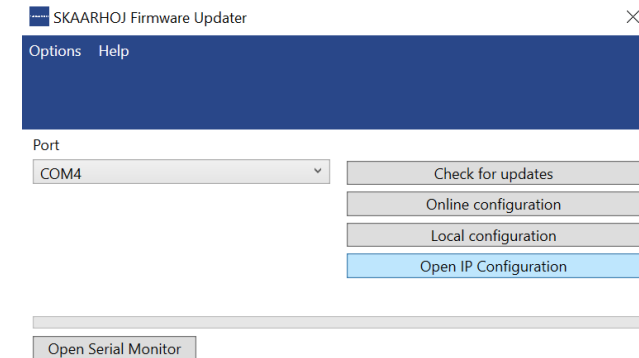

Step 5

- Make sure the Skaarhoj PTZ Pro is in the same network as the MVI Server.
- The Skaarhoj PTZ Pro will light up when MVI Server discovers the controller.

